



## Rolled Bamboo Fencing



**Installation Guide**

(888) 788-2254  
[www.CaliBamboo.com](http://www.CaliBamboo.com)

## General Guidelines

Proper installation and maintenance are key elements in achieving best fencing results. It is the responsibility of the installer/owner to follow all guidelines provided by Cali Bamboo for success. **Please read through this document completely, additional installation materials such as videos, illustrations and more can also be found at [www.calibamboo.com](http://www.calibamboo.com).**

- Cali Bamboo always recommends sealing the bamboo fencing with TWP (Total Weather Protectant) before or immediately after installation has occurred (See Maintenance Guide at: [https://www.calibamboo.com/content/installation/care\\_maintenance/bamboo\\_fencing\\_care\\_and\\_maintenance.pdf](https://www.calibamboo.com/content/installation/care_maintenance/bamboo_fencing_care_and_maintenance.pdf))
- Always predrill the Bamboo fencing before attempting to fasten the fence to the studs. Cali Bamboo recommends fastening the Bamboo fence every 10th pole.
  - Use caution with the speed of the screw gun to ensure poles are not cracked during installation
- Cali Bamboo recommends using screws made for outdoor use, solid decking screws tend to work the best.
- When installing Cali Bamboo fencing it is important to remember there are a top and a bottom side. The ends that are capped off are the top side (See Diagram 1).
- When installing the fencing it is highly recommended to keep the fencing at least 1-2 inches off the ground. This will help prevent the fencing from absorbing moisture from the ground
- Always check with your local building code before the start of your project as building code supersedes all guidelines.
- Poles can be removed from fencing panel for a perfect fit (this will require cutting metal wiring).

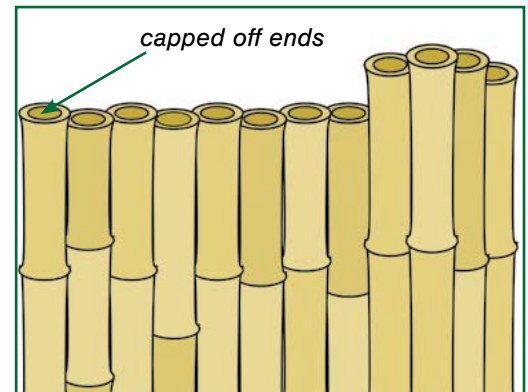


DIAGRAM 1

## INSTALLING OVER A CINDER BLOCK/BRICK WALL

- First thing you will need to do is install studs 1' from the top and bottom of the cinder block/brick wall. You want to use a minimum of 1"x3" furring strip (2"x4" recommended) as your studs (See Diagram 2).
- Install studs horizontally along the wall. Always predrill then use concrete screws to fasten studs to cinder block/brick wall.
- Once studs are securely fastened you can start installing your Bamboo fencing.

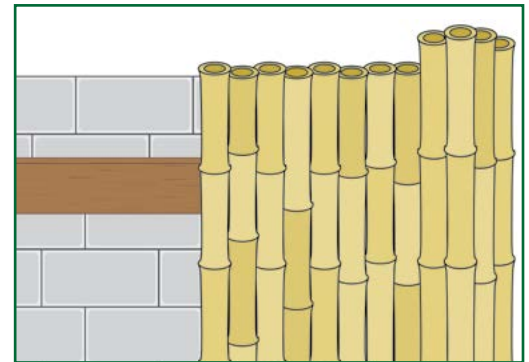


DIAGRAM 2

## INSTALLING OVER CHAIN LINK FENCING

- When installing over a chain link fence the recommended method to attach the bamboo rolls with zip ties.
- Zip ties should be used at least every 2' along the length of the fence and at least 6" from the top and bottom of the existing chain link.

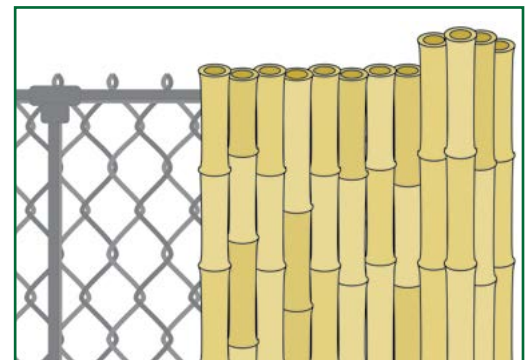
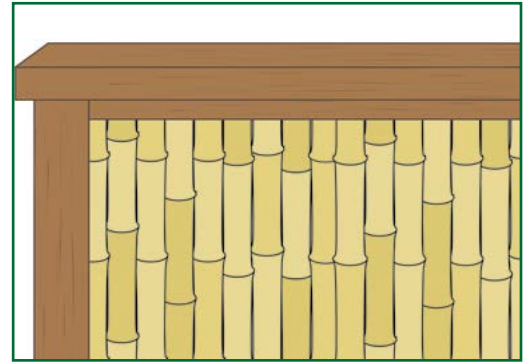


DIAGRAM 3

## INSTALLING WITH NO EXISTING FENCE

- See local Building Code for framing requirements.
- Once frame is complete you can now attach fencing.
- Always predrill poles before putting screws in.

**Please note:** Above guideline is just that, a guide. Local building code will always supersede the guideline provided. It is up to the installer of the fence to follow outdoor building best practices for safety and best results.



**DIAGRAM 4**